



Installation instructions

📍 10063

Renault Twingo RS
5-speed transmission



WWW.CAE-RACING.DE



TWINGO RS

PLEASE NOTE

SAFETY FIRST!

- ⚠ Please only do the installation if you have appropriate experience in the automotive sector and have the right tools! An incorrectly installed Shifter can seriously damage the transmission or make the vehicle undriveable or not shiftable and lead to serious accidents!
- ⚠ If work on the electrical system is necessary, please follow the manufacturer's specifications.
- ⚠ It is essential to leave the ignition switched off when the plugs are disconnected.
Do not leave the car key in the vehicle.
- ⚠ Carry out all work with care and cleanliness! For the professional assembly of a shifter is no force required. All parts are designed to fit your vehicle.
- ⚠ If you are unsure, please contact your trusted workshop about the installation!

BASICALLY

- ⚠ Use ethyl alcohol/brake cleaner to clean all aluminum parts.
- ⚠ Occasionally lubricate all moving parts with spray grease, which has good creeping properties.
Our recommendation: Würth HHS 2000 (WD-40 or similar is unsuitable because it is too thin)
- ⚠ All screws and nuts that are not self-locking or are fitted with tooth lock washers glue in during assembly!
- ⚠ Never kink shift cables, please!

i SURFACES AND THEIR CARE

Please note that an untreated aluminum surface (ALU) is sensitive to aggressive Liquids to which i.a. Hand sweat also counts. Especially the high-strength 7075 aluminum we use has a tendency to form black spots of corrosion due to its high copper content. Under special circumstances, very salty air near the sea and coast can lead to corrosion. The surfaces should therefore be cleaned regularly and treated with care to prevent this. For this purpose, e.g. ethyl alcohol or brake cleaner. Only spray these onto a cloth and wipe the shifter with it, NEVER spray the shifter directly. If stains have already formed, they can be removed with commercially available aluminum polish, but that is also not allowed get into the movable parts of the shifter. The anodized versions of our shifters (EXS, EXGR) are more resistant to corrosion. The steel parts have to be also cared in all variants.


TIPS FOR GEAR SHIFTING

i FORCE DOESN'T MAKES YOU FASTER – IT ONLY HARMS THE TRANSMISSION

The question arises again and again: "Does a CAE shifter puts more strain on a gearbox than a standard gear lever?" The answer is clear: "No!" The things that are most stressful for a synchronizer ring in a transmission are excessive shifting forces or a wrong shift in gear. Basically, the shift travel with a CAE Shifter is significantly shorter than with the standard lever. We achieve 30 - 55 % reduction depending on the vehicle and transmission type. This can only be achieved by using the appropriate gear ratio on the shift lever. You can feel it through the precision of a CAE shifter engaging the gears is much better than with a standard gear lever designed for comfort. The force for this decreases in the same proportion - we put in the gears with significantly less load for the synchronizer rings. In addition, with a correctly adjusted CAE shifter put in the gears is very precise and shifting into the wrong gear is extremely rare. Even in motorsport, fast, precise, but still sensitive shifting leads to the goal! Everything else is pure tugging and tearing which puts a disproportionately high strain on a transmission and in the worst case causes a fatal wrong shift in gear!

Included in delivery

- ▶ 1x shifter completely monted, design depending on ordered variant (Picture A)
- ▶ 1x Shift knob incl. counter screw M6x20 V2A, design depending on ordered variant (Picture B)
- ▶ Accessories package + Cover plate (Bild C)
- ▶ 1x shift cable (S), 1x selector cable (W) (Picture D)

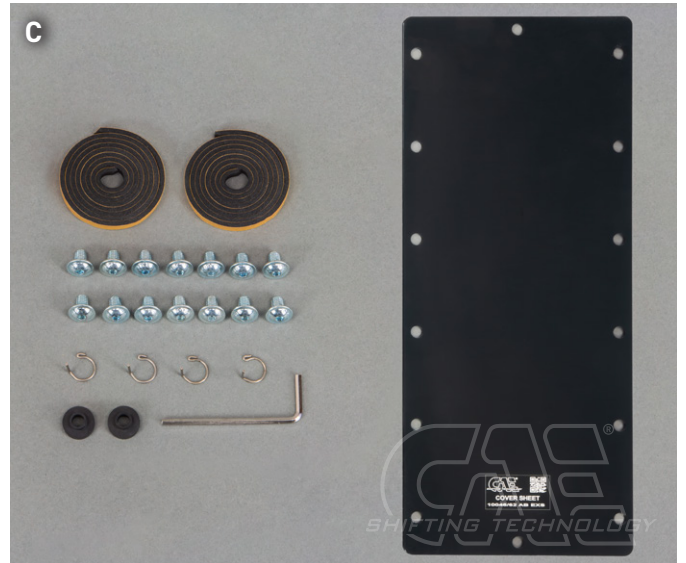

i The shifter is designed for vehicles with interior equipment. The center console does not have to be removed for installation. The center console and the cover frame of the shift boot must be cut out until the appropriate clearance for the shifter is ensured.

i Lubricate all moving parts occasionally with good spray grease, our recommendation: Würth HHS 2000. For this purpose, e.g. touch the rubber caps on the ball heads. To clean the aluminum parts, we recommend brake cleaner.


The removal

i Safely lift the vehicle on a car lift.

- ▶ Disconnect the battery and remove it including the battery carrier.
- ▶ Remove air filter
- ▶ Remove the ends of the original gearshift cables and unhook the cables from the abutment.
- ▶ Remove underfloor panelling and heat shields, unhook/loosen exhaust and let it hang approx. 60cm, secure with rope or wire, make sure that the flex pipe is not overstretched. (Picture 1)
- ▶ Remove center console completely. (Picture 2)
- ▶ Unscrew original gearshift lever and gearshift cables and remove from vehicle downwards. (Picture 3, 4)



- ▶ Drill out the original retaining bolts from the center tunnel. To do this, punch the head from above, pre-drill with 3mm and then drill out with 6.5mm. Mill out the bolt head with a taper countersink. (Picture 5, 6)

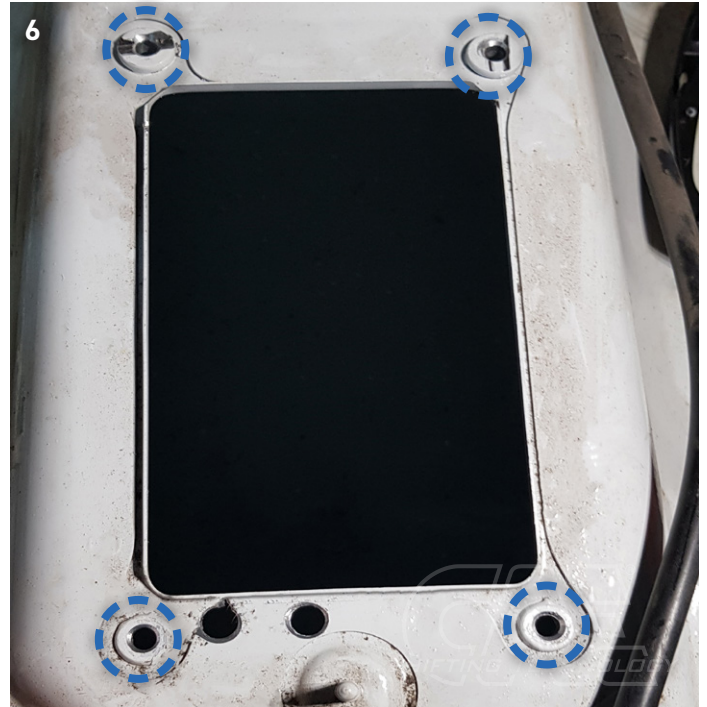


- ▶ Stick foam rubber strips on the shifter to ensure gas tightness during assembly, make sure that all holes in the base plate are covered. (Picture 7)



Laying the switching cables

- ▶ Assembly of switching cables (Picture 8)

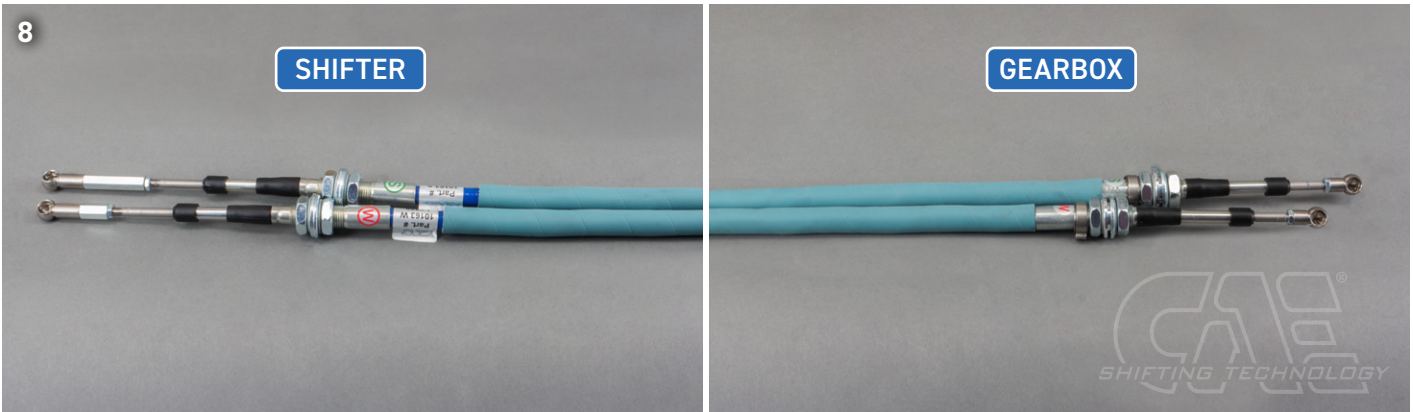


- ▶ Pay attention to the assignment of the cables. (Picture 4, 5)

S **W** the stickers with border belong to the shifter, **S** **W** the stickers without border belong to the gearbox.

Installation of CAE shifter


- i** Generally install a sealing collar on each ball and grease ball cups and sealing caps. After complete assembly of the shifter, secure the ball heads with the cotter pin clips. Glue in all nuts / screws during assembly!
Never kink the shift cables!

- ▶ Insert the shifter into the tunnel from below according to the series part and fasten it with the 4 nuts and washers supplied (Picture 9).

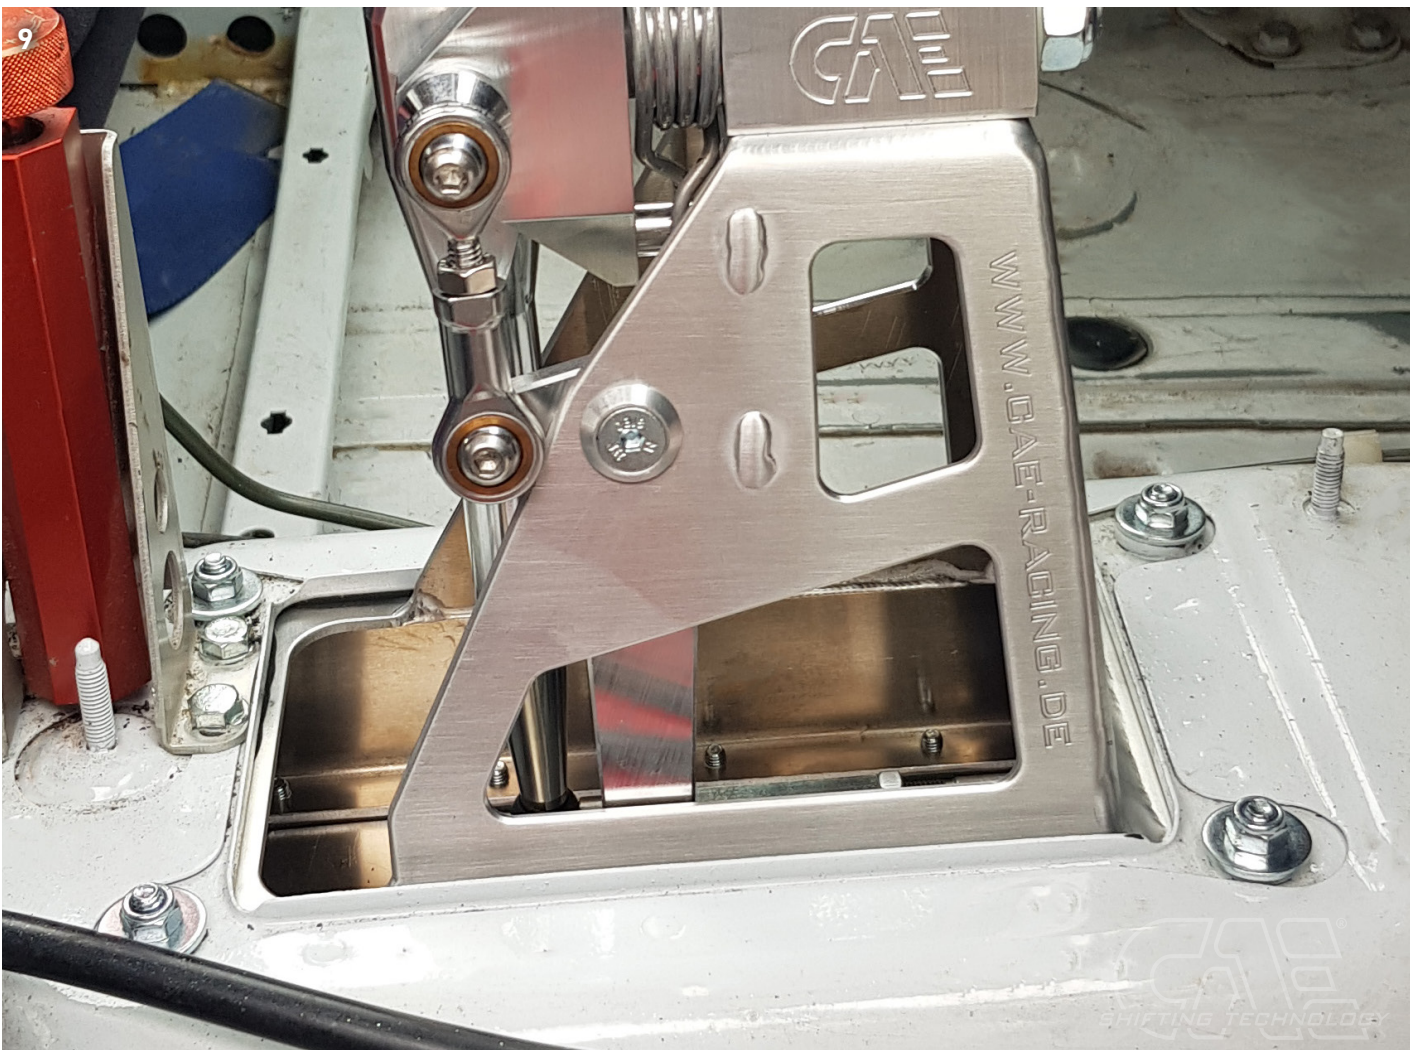

Mounting the shift cables on the shifter

- ▶ The linkage levers on the gearbox side do not need to be dismantled. On the shifter side, remove all attachments except for 1 washer and nut to be able to attach the cables to the tower. The longer rope (S) L=910mm is attached to the center of the gear tower, correspondingly the shorter selector cable (W) L= 890mm on the right. (Picture 10)

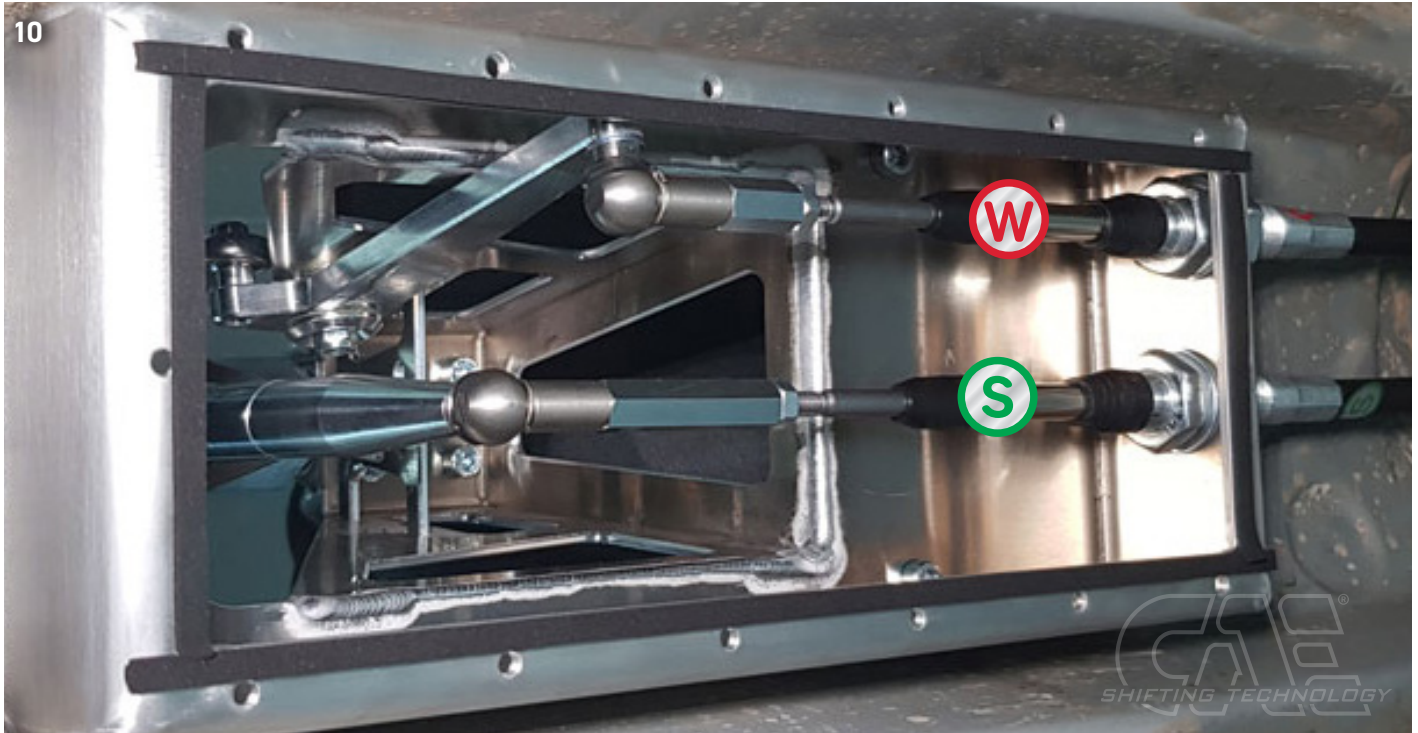

- ▶ The shift cables should be attached to the box as shown here. Immediately route ropes toward engine compartment above transmission when installing. Tighten the M16 nuts until the pulleys are on block. !! DO NOT GLUE !!!



HEAT PROTECTION FOR SHIFT CABLES (FOR ALL VEHICLES WITH CAE SHIFT CABLES)

Exhaust systems generate incredible temperatures, which can be several 100 degrees, especially under full load! Therefore, the shift cables must be absolutely protected with the blue-gray protective hoses against the strong heat effect!


Also the protected shift cables must not be in contact with the exhaust. For turbo engines please take additional measures should be taken, e.g. aluminum honeycomb sheets, heat protection tape or foils.



**EXCESSIVELY HIGH TEMPERATURES PERMANENTLY DAMAGE THE SHIFT CABLES!
ESPECIALLY IN MOTORSPORTS, THE HEAT DEVELOPMENT IS ENORMOUS!**



- ▶ Tighten the M16 nuts and make sure that there is no tension on the cables. Do NOT glue the nuts! (Picture 11)

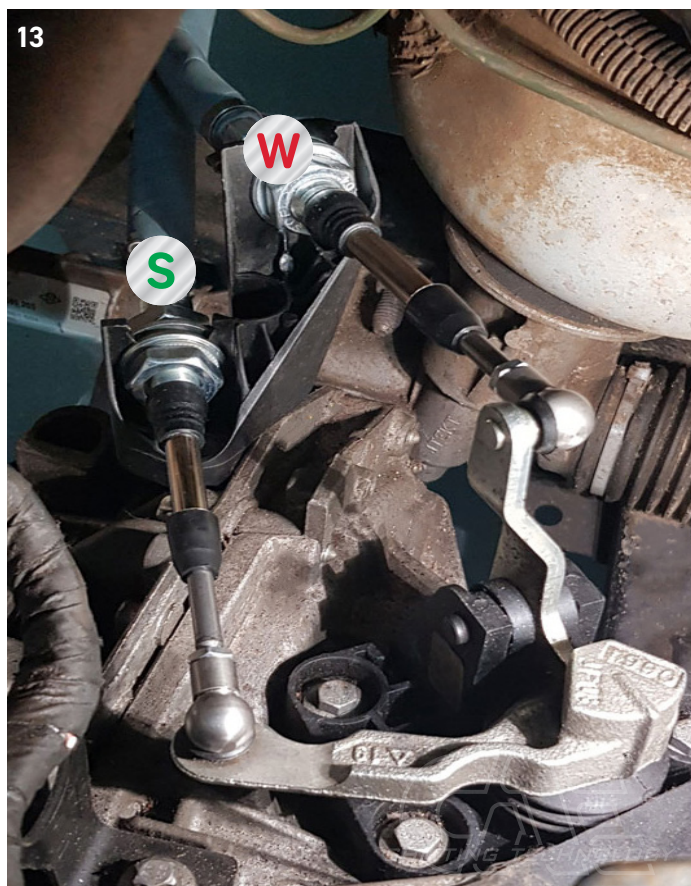


- ▶ Fasten the cables to the gear unit abutment as shown in this illustration. Make sure that the centering washers are correctly positioned between the large U washers (Picture 12, 13).

Adjust the shift range 5 speed gearbox

CHECK T

PLEASE NOTE residual travel

Sample pictures:

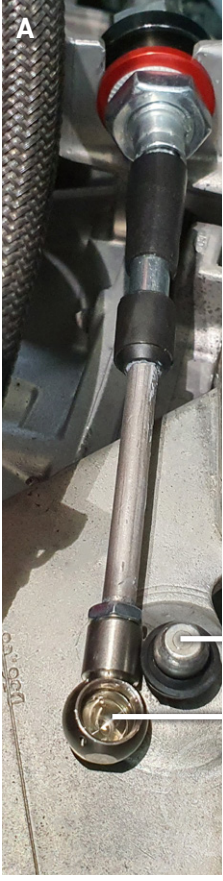

Shift transmission to 3rd or 4th gear. The 3rd and 4th gears are in neutral zero position. To engage them, simply move shift lever forward or backward without load. (Picture 10)

Adjust the length of the ball socket at the end of the selector cable (W) so that the lateral play on the shift lever is the same when 3rd/4th gear is engaged; it must be possible to press the ball socket onto the ball of the L lever without changing the length.

Shift the gearbox to level 1 / 2 using the shift lever and screw in the stop screw Z until the gears in level 1 / 2 can be changed cleanly. (Picture 11)

Now shift gearbox to 5th/6th gear level using shift lever and screw in stop screw until 5th gear can be engaged cleanly. (Picture 11)


Actuate reverse gear locking pin via cable and shift transmission to reverse gear level. Screw in stop screw until reverse gear can be engaged cleanly (Picture 11).

Install all clamps on the ball cups in the shifter.

To reinstall the center console, it must be machined accordingly. (Picture 12, 13, 14)

SWITCHING CABLES

ear is engaged, there must still be a

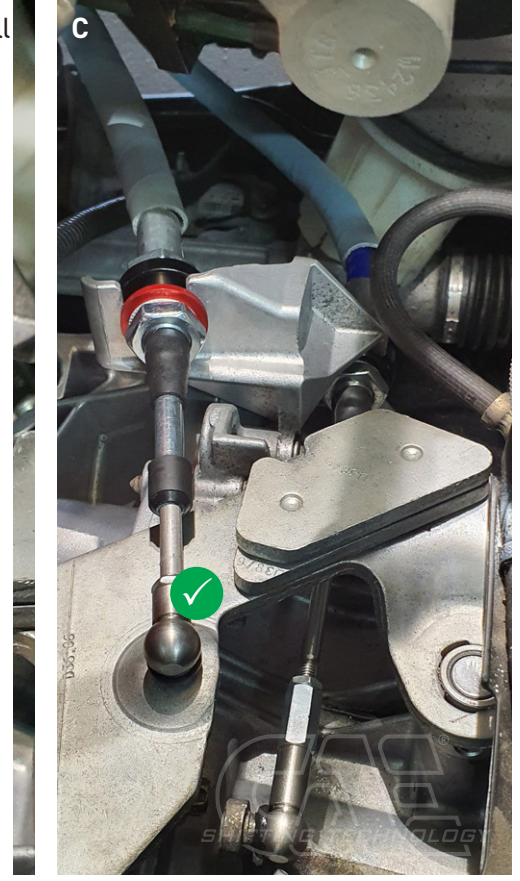


CHECK: With the gear engaged, pull the ball cup off the gearshift lever and check whether the shift cable can still be moved at least 3 mm. This applies to the "front" gears R-1-3-5 (Picture A) with the cable retracted and to the "rear" gears 2-4 (6) (Picture B) with the cable extended. The end position can be corrected by screwing the ball cups on the M6 thread of the cables in or out.

After checking and adjusting, reassemble the ball cups from the shift cable. (Picture C)


ATTENTION: THIS CONTROL IS VERY IMPORTANT FOR THE FUNCTION OF THE SHIFTER !!!
If the remaining travel on the shift cable is missing, there is an immediate risk of damage to the gearbox. !!!!!

Adjust the shift range 5 speed gearbox

- ▶ Adjust shift lever center position on spring stop under shift block exactly vertically. (Picture 14)
- ▶ Shift transmission to 3rd or 4th gear. The 3rd and 4th gears are in neutral zero position. To engage them, simply move the shift lever forward or backward without load. (Picture 14)
- ▶ Adjust the length of the ball socket at the end of the selector cable (W) so that the lateral play on the shift lever is the same when 3rd/4th gear is engaged; it must be possible to press the ball socket onto the ball of the L lever without changing the length.
- ▶ Shift the gearbox to level 1 / 2 using the shift lever and screw in the stop screw until the gears in level 1 / 2 can be changed cleanly. (Picture 15)
- ▶ Now shift gearbox to 5th gear level using shift lever and screw in stop screw until 5th gear can be engaged cleanly. (Picture 15)
- ▶ To engage reverse gear, shift from neutral to reverse gear. The transmission has an internal lockout that prevents shifting from 5th gear to reverse. The reverse gear is on the same level as the 5th gear (Picture 15).
- ▶ Install all clamps on the ball cups in the shifter.

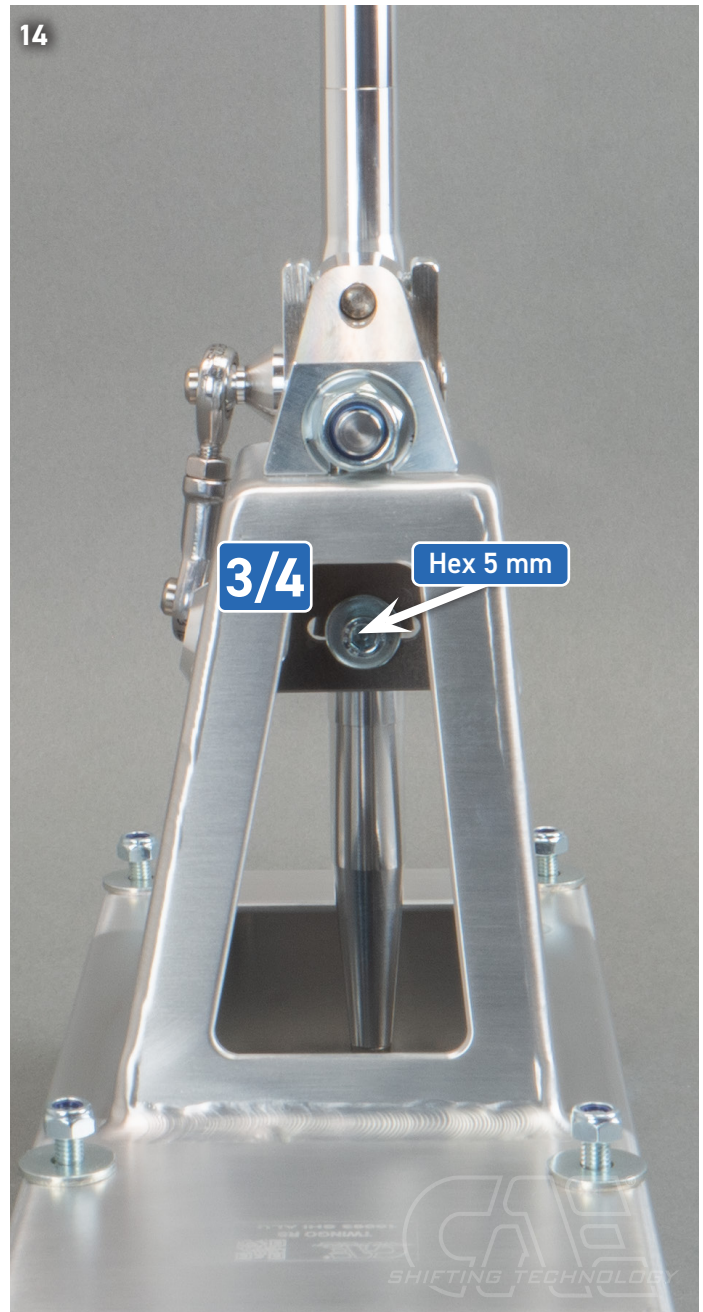

- ▶ Screw cover plate under shifter box and again seal with foam rubber strip, glue screws in place, reinstall heat plates , exhaust , underbody trim , battery tray and battery and air filter.

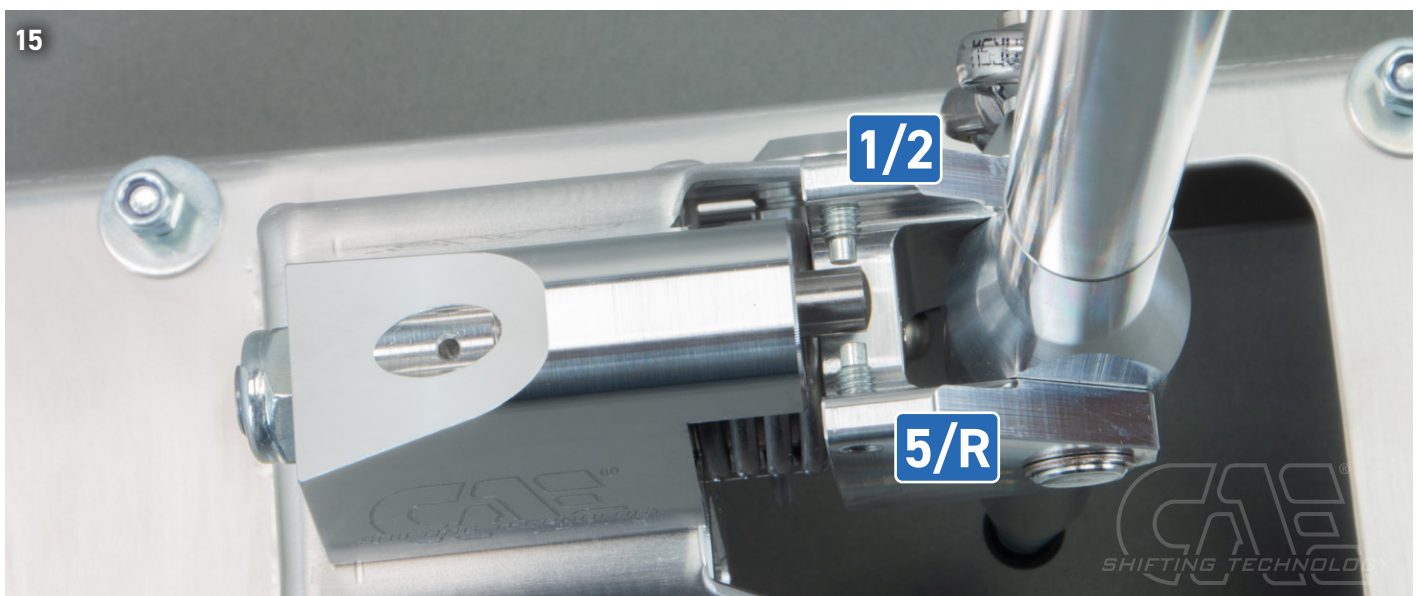



FINALLY! Check all functions and settings during the test drive and readjust if necessary!

Incorrect or inaccurate settings can cause damage to the gear box and consequential damage!

Reinstalling the center console

► To reinstall the center console, it must be machined accordingly. (Picture 16)



If you have any questions or problems, please be sure to contact us, we look forward to your feedback to improve our products.



RACE THE ORIGINAL



Alte Bottroper Strasse 103
D-45356 Essen
0049. 201. 8 777 802
service@cae-racing.de

WWW.CAE-RACING.DE